



501-37

Trouble Shooting

PROBLEM

- 1.** Is the light on in the transformer?



→
NO

SOLUTION

Check the power outlet and wire to transformer
Unplug for the 3 minutes, plug in again
Still no light?
Change the transformer

↓ YES

- 2.** Lean in over the desk frame and add weight while pushing the down-button. Will the desk go down?

→
NO

No, go to no. 5

↓ YES

- 3.** Connect the motor to the transformer – very briefly (Remove quickly!!) Did the desk frame move?




→
NO

Change the power leg

↓ YES

- 4.** Connect the wires again (red/red) according to assembly instruction

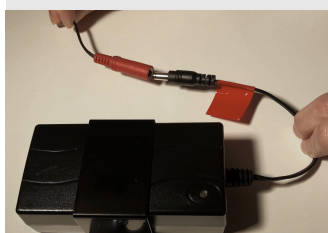

↓ YES

- 5.** Check if the buttons are used correctly. Does the frame work?
If a handset button is not responding then press it very firmly a few times until you hear a slight click and this will mean the microswitch is activated again and the button should now work fine.
The handset does not need to be disconnected for this process.



→
NO

Change the control panel