

MOUNTING INSTRUCTIONS

MOTOR FOR 501-2, 501-7

R113200

IMPORTANT

Make sure to unplug the table before starting this operation

HOW TO:

1. Remove table top, legs and table top supports.
2. Place the lifting column on an even surface
3. Remove the 2 screws marked with an A in figure 1
4. Remove the end stop marked with a B in figure 1

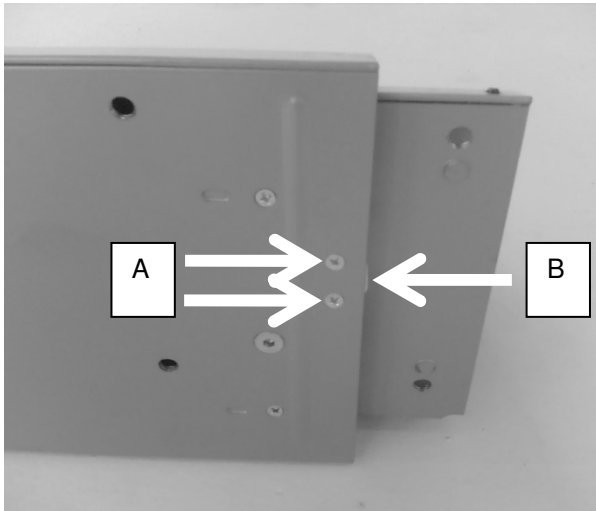


Fig. 1

5. Run the lifting column to its longest position

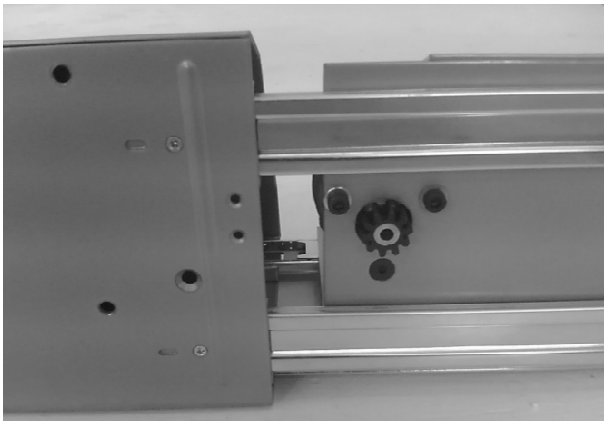


Fig. 2

6. Remove the 3 motor screws marked in figure 2 and replace the motor
7. The table frame is now ready for re-assembly

NEED HELP?

Contact us on conset@conset.com for further assistance